


SKYBAR

Pre-Construction Bracket Manual

Assembly Instructions

1. Before installing the Skybar Pre-Construction Brackets, carefully plan the locations of the speakers accounting for potential electrical, plumbing, and other fixtures.
2. Route speaker cable from source to this location.
3. Lay L-bracket on a flat surface parallels to each other with screw holes flat on the surface.
4. Make sure the L-bracket edges are adjacent to each other facing inward to speaker opening.
5. Place sliding rails on top of the L-brackets while lining up screw holes.
6. Screw all four joints with provided screws.
7. Use wood screws to mount Pre-Construction Bracket onto ceiling joists or wall studs with the L-bracket edge facing the room.
8. Before tightening wood screws, slide Pre-construction bracket to the desired location and tighten.

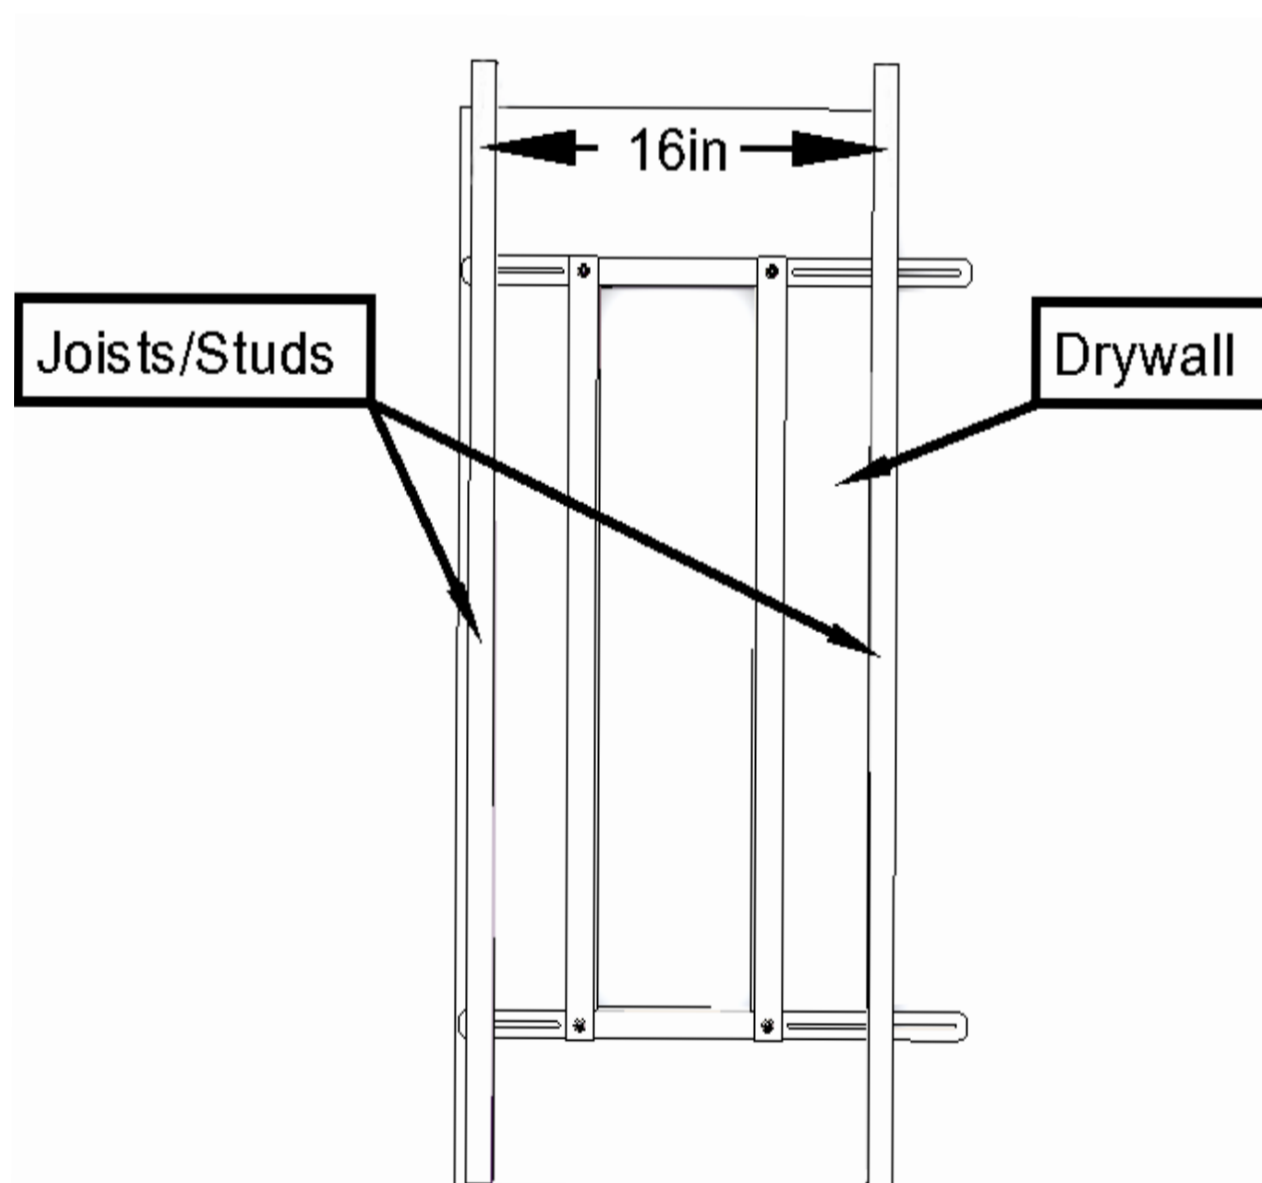

TDG AUDIO